



Instruction Manual

VR10

Quick Start Guide

STEP ONE: Battery Installation

- 1 To get started, insert one of your backup keys into the keyhole at the front of the safe (see FIGURE A). Push key in and rotate the key 90 degrees clockwise to open the safe.
- 2 Remove the interior padding. Locate the battery compartment door on the inside of the safe directly behind the '1' key on the keypad (see FIGURE B).
- 3 Remove the battery cover by pressing down on the tab near the top of the cover.
- 4 Insert the battery (included in accessory box) into the battery compartment. Note that your Vaultek® safe automatically detects the polarity of the battery and can be installed in either direction.

TIP! For easy removal make sure to place the pull string over the battery before replacing the cover.

- 5 When the battery is inserted you will hear a short welcome tone and the keypad will light up. Once you hear the tone and see the keypad light up, replace the battery cover. You are now ready to program your safe.

IMPORTANT Your Vaultek® safe will automatically lock when you fully close the lid.

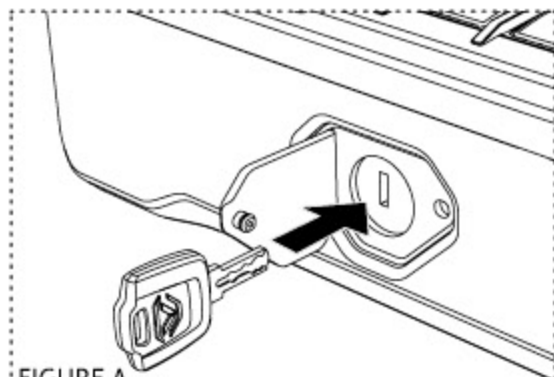


FIGURE A

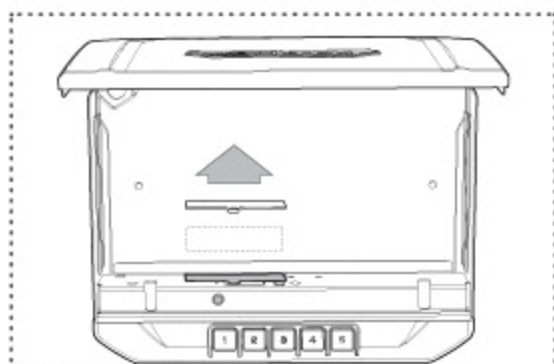


FIGURE B

STEP TWO: Master Code Programming



First time users should change the default code as soon as possible to prevent unauthorized access to your safe. You will also use this master code to pair the Vaultek® app on your smartphone, so it should be kept confidential.

TIP: Code Requirements

- Your code can be a minimum of 4 and a maximum of 8 digits. We recommend a code 6 to 8 digits in length using at least one of each key to make it more difficult for someone to guess your code. For your security, the safe will time out and sleep if 6 or more incorrect entries are made.
- Two keys cannot be pressed simultaneously.
- Programming a new code will overwrite your previous code.
- **TIP!** The Vaultek® app will ask for your safe's master code during pairing and anytime you change the code the app will ask you to re-pair.

- 1 Open the safe. (The default master code is 1-2-3-4-5 on keypad)
- 2 With the safe open, press and hold the "PROGRAM" button (3 seconds) (FIGURE C) until all keys (1-5) light up RED and let go.
- 3 Enter your NEW master code.
- 4 Press and hold the "PROGRAM" button a second time (3 seconds) until all keys (1-5) light up RED and let go.
- 5 Enter your NEW master code a second time.
- 6 Press and hold the "PROGRAM" button a third time (3 seconds) until the safe beeps and let go. This tone confirms that the password has been reset.



FIGURE C

If you make a mistake and the new code will not work, simply start over with step 2.

STEP THREE: Product Registration



Vaultek® strongly encourages you to register your safe as soon as you receive it. Registration provides many benefits including technical support and ordering replacement keys should you misplace them. Your Vaultek® safe has a unique product number on the inside of the battery door and a 4-digit ID number engraved on the keys. You will need these numbers to register your safe.

- 1 Locate your product number. It is printed on the first page of this user manual and on the inside of the battery door (FIGURE D/E).
- 2 Find your 4-digit ID number engraved on the keys (FIGURE F).
- 3 Please visit the Vaultek® website at vaulteksafe.com and click Support/Product Registration.
- 4 Enter the required information in the form and click submit.

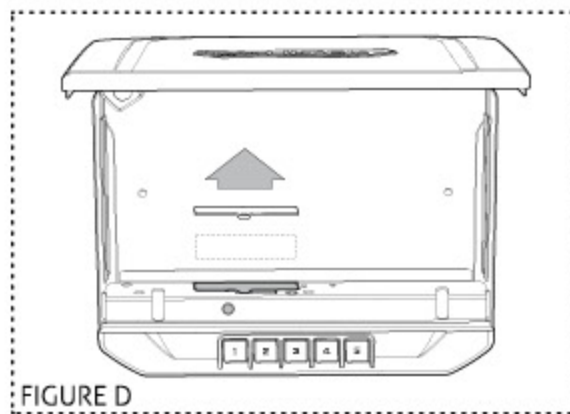


FIGURE D

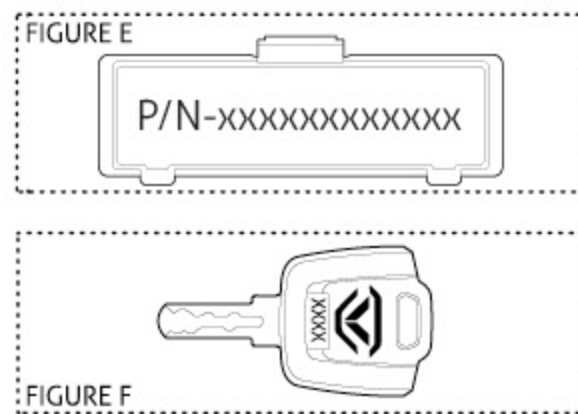


FIGURE E

FIGURE F

Table of Contents

Introduction / Warnings	01 / 02
Battery Operation / Battery Maintenance	03 / 05
Battery Installation	03
Charging the Battery	04
Master Code Programming	06
Product Registration	07
Hot Keys	08 / 09
Tamper Detection	08
Toggle Stealth Mode	08
Toggle Travel Mode	08
View Battery Status	08
Toggle Interior Light	09
Toggle Bluetooth®	09
Toggle App Unlock	09
Vaultek® App / App Features	10 / 11
Securing Your Safe	12
FAQ	13 / 14
Troubleshooting	15
Customer Support / Warranty	16

Box Contents

Vaultek® VR10 Safe
18650 Rechargeable Lithium-ion Battery
Micro-USB Charging Cable
High Strength Steel Security Cable
Hardware Mounting Kit
Owner's Manual / Quick Start Guide
Backup Keys (2)

Vaultek® App!

The Vaultek® app is available for Android and iOS devices. The app allows you to remotely unlock safe, check battery level, toggle sound ON/OFF, adjust the interior light, plus much more. See pages 10 to 11 for more information.

Tutorial Videos

Listed below are some of the various tutorials available at vaulteksafe.com.

Installing Your Battery
How to Register Your Safe
Change Your Master Code

Overview of the Bluetooth® App
How to Anchor Your Safe
+ More videos online.

GET STARTED

VR10
VAULTEKSAFE.COM/10SERIES-SUPPORT

ONLINE TUTORIALS
Quick setup help.

Introduction

The Vaultek® VR10 is a PIN access / Bluetooth® access safe. Its solid structure and penetration resistant design makes it ideal for storing valuables such as firearms, jewelry, cash, and other personal items. Powered by a rechargeable lithium-ion battery, the safe combines high security with complete access control.

Secure Access How to open your Vaultek® safe.

Keypad The numeric keypad responds quickly for rapid access and has a built-in proximity sensor that lights up when your hand brushes against the safe. See page 06 for more information.

Key Two keys are provided for manual access to the safe in the event the battery dies.

Secure Defense How your Vaultek® safe keeps people out.

Anti-Impact Latches Built to withstand forceful impacts and heavy slams.

Unibody Construction Our unibody design is extremely strong without welds or weak points.

No External Access Points A combination of an interior mounted hinge system and extended anti-pry reinforcement bars help prevent unwanted tools from attempting to break the safe open.

Mounting Feature Secure your safe to a stationary object via the included high strength steel security cable or via the two pre-drilled mounting holes using the included mounting hardware.

Security Sleep Mode Activates when six (6) consecutive incorrect keypad entries are entered and does not accept any entries for four minutes. If a button is pressed during this mode, all of the numbers will flash RED and the alarm beeps. A backup key may be used to open the safe.

TUTORIALS ONLINE AT [VAULTEKSAFE.COM/10SERIES-SUPPORT](https://www.vaulteksafe.com/10series-support)

Warnings

To prevent damage to your Vaultek® unit or injury to yourself or to others, read the following safety precautions before using this unit.

DO NOT PLACE OR STORE THE BACKUP KEYS INSIDE THE SAFE AT ANY TIME. IF THE BATTERY FAILS, YOU WILL BE UNABLE TO OPEN THE SAFE.

DO NOT expose to extreme heat or cold. Battery power may be affected.

DO NOT store loaded guns in this unit. Firearms are serious in nature and must be handled with respect. Store responsibly.

ALWAYS check to make sure door has latched when closing; lid requires a firm press and locks automatically.

Be sure and follow all local and state firearm laws.

DO NOT operate a firearm without proper training and experience.

DISCLAIMERS:

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR UNAUTHORIZED ACCESS, ANY INJURY, LOSS OR DAMAGE TO PERSONAL PROPERTY DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VAULTEK® SAFE.

THE USER SHALL DETERMINE THE SUITABILITY OF THE VAULTEK® SAFE BEFORE THE INTENDED USE AND USER ASSUMES ALL RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH. VAULTEK® SAFES ARE NOT INTENDED TO PROTECT AGAINST ENVIRONMENTAL HAZARDS INCLUDING FIRE AND WATER.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Vaultek Safe, Inc. is under license.

Battery Operation

Your safe uses a 3.7V 18650 rechargeable lithium-ion with a flat top. A minimum 2000 mAh capacity is required, however 2200 mAh or higher can be used to increase operation time. A high capacity battery upgrade is available as an accessory through our website.

Battery Installation

- 1 To get started, insert one of your backup keys into the keyhole at the front of the safe (see FIGURE A). Push key in and rotate the key 90 degrees clockwise to open the safe.
- 2 Remove the interior padding. Locate the battery compartment door on the inside of the safe directly behind the '1' key on the keypad (see FIGURE B).
- 3 Remove the battery cover by pressing down on the tab near the top of the cover.
- 4 Insert the battery (included in accessory box) into the battery compartment. Note that your Vaultek® safe automatically detects the polarity of the battery and can be installed in either direction.

TIP! For easy removal make sure to place the pull string over the battery before replacing the cover.

- 5 When the battery is inserted you will hear a short welcome tone and the keypad will light up. Once you hear the tone and see the keypad light up, replace the battery cover. You are now ready to program your safe.

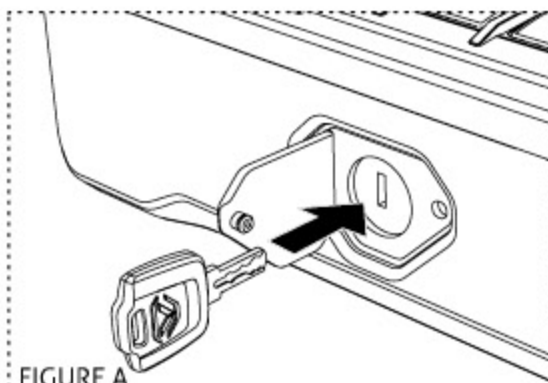


FIGURE A

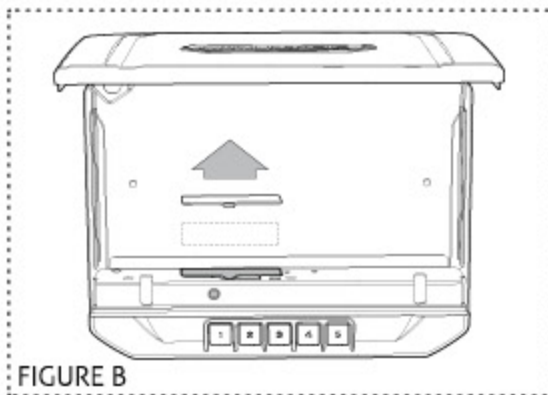


FIGURE B

Continue on next page for more information about the battery.

Charging the Battery

Your Vaultek® safe is powered by a rechargeable lithium-ion battery and comes with a micro-USB charging cable. The safe and micro-USB cable can be used with all international power adapters. A USB power adapter is not included but is commonly available in most households. Under normal usage, a fully charged battery can last at least 3 months.

- 1 **To recharge the safe**, plug the micro-USB cable into the micro-USB receiving jack located on the side of the safe (FIGURE C) and connect to a standard USB port or wall outlet using an AC power adapter. Approximate recharge time is 2.5 hours.
- 2 The LED next to the receiving jack on the side of the safe (FIGURE C) will glow RED indicating charging and GREEN indicating charged.

Charging TIPS

- A After installing the battery, use the micro-USB charging cable and connect to a standard USB port or wall outlet using an AC power adapter to charge the unit 100%.
- B The micro-USB cable and an adapter can also function as an external power supply, which means you can open your safe even when the battery is depleted.
- C A specially designed Vaultek powerpack is available as a separate accessory to extend operation time.
- D Leaving your safe plugged in continually will **not** harm the safe or battery. However, to preserve battery life we suggest that you unplug occasionally to allow the battery to cycle down.
- E The adapter used to charge the battery should output 5V/2000mA or above when using micro-USB cable.

See the FAQ section for additional information about the battery.

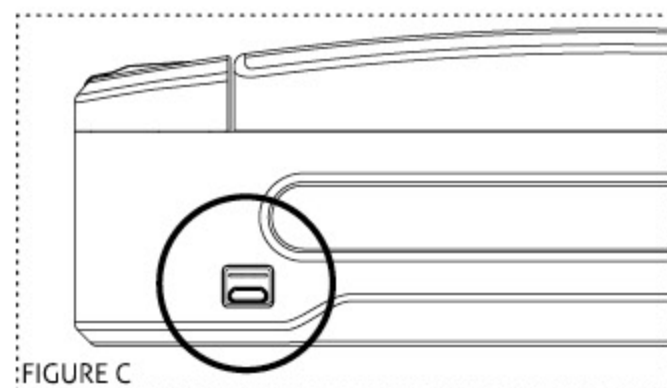


FIGURE C

Battery Maintenance

Testing the Battery Power

To check the battery level, press and hold the '5' key on the keypad for 3 seconds). The keys '1' to '4' will glow GREEN or RED indicating the battery level:

Remaining Battery Capacity Level

If 4 keys glow green: 80%-100%

If 3 keys glow green: 60%-80%

If 2 keys glow green: 40%-60%

If 1 key glows green: 20%-40%

If 1 key glows red: 10%-20%

If 1 key blinks red: less than 10%

Low Battery

If the '1' key on the keypad blinks RED several times and you hear several rapid beeps when opening the safe, your battery level is critically low and your safe needs to be recharged immediately.

Soft Reset TIP

In the event the battery dies or a soft reset is performed (battery removal and installation) the master code will not be affected.

IMPORTANT

Use a 3.7V 18650 rechargeable lithium-ion battery with a flat top. A minimum 2000 mAh capacity is required, however 2200 mAh or higher can be used to increase operation time.

A high capacity battery upgrade is available as an accessory through our website.

The adapter used to charge the battery should output 5V/2000mA or above when using the micro-USB charging cable.

TUTORIALS ONLINE AT [VAULTEKSAFE.COM/10SERIES-SUPPORT](https://www.vaulteksafe.com/10series-support)

Master Code Programming

First time users should change the default code as soon as possible to prevent unauthorized access to your safe. You will also use this master code to pair the Vaultek® app on your smartphone, so it should be kept confidential.

TIP: Code Requirements

- Your code can be a minimum of 4 and a maximum of 8 digits. We recommend a code 6 to 8 digits in length using at least one of each key to make it more difficult for someone to guess your code. For your security, the safe will time out and sleep for 4 minutes if 6 incorrect entries are made.
- Two keys cannot be pressed simultaneously.
- Programming a new code will overwrite your previous code.
- **TIP!** The Vaultek® app will ask for your safe's master code during pairing and anytime you change the code the app will ask you to re-enter it.

1 Open the safe. (The default master code is 1-2-3-4-5 on keypad)

2 With the safe open, press and hold the "PROGRAM" button (3 seconds) (FIGURE D) until all keys (1-5) light up RED and let go.

3 Enter your NEW master code.

4 Press and hold the "PROGRAM" button a second time (3 seconds) until all keys (1-5) light up RED and let go.

5 Enter your NEW master code a second time.

6 Press and hold the "PROGRAM" button a third time (3 seconds) until the safe beeps and let go. This tone confirms that the password has been reset.

If you make a mistake and the new code will not work, simply start over with step 2.


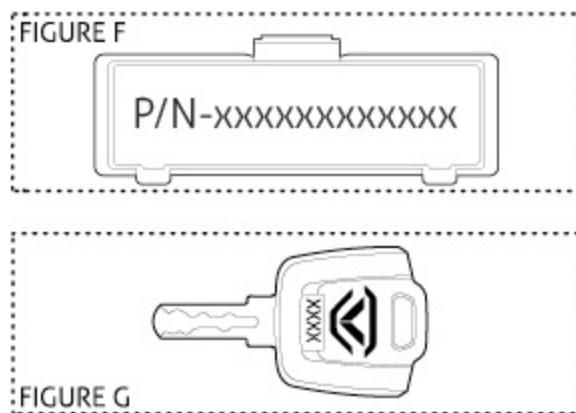


FIGURE D

Product Registration

Vaultek® strongly encourages you to register your safe as soon as you receive it. Registration provides many benefits including technical support and ordering replacement keys should you misplace them. Your Vaultek® safe has a unique product number on the inside of the battery door and a 4-digit ID number engraved on the keys. You will need these numbers to register your safe.

- 1 Locate your product number. It is printed on the first page of this user manual and on the inside of the battery door (FIGURE E/F).
- 2 Find your 4-digit ID number engraved on the keys (FIGURE G).
- 3 Please visit the Vaultek® website at vaulteksafe.com and click Support/Product Registration.
- 4 Enter the required information in the form and click submit.

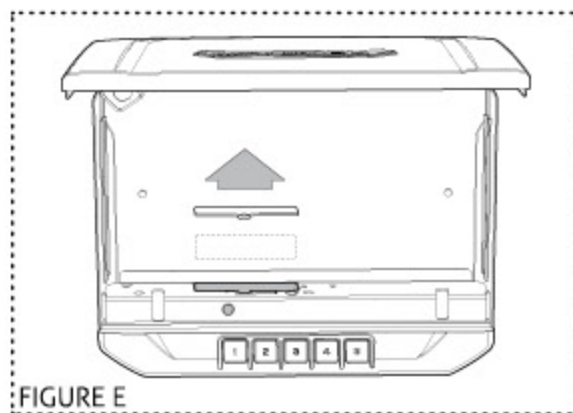

TUTORIALS ONLINE AT VAULTEKSAFE.COM/10SERIES-SUPPORT

Hot Keys More Hot Keys on the next page.

Tamper Detection

Press and hold '2' and '4'



To check for tampering press and hold keys '2' and '4' together for 3 seconds. The '3' key will glow RED to indicate tampering or GREEN to indicate no tampering. You can reset the tamper detection by opening the safe through one of the authorized entry points.

Toggle Stealth Mode

Press and hold '1' and '3'



To toggle the sound ON/OFF press and hold keys '1' and '3' together for 3 seconds. If the '2' key glows GREEN, the sound is ON; if the '2' key glows RED, the sound is OFF.

Toggle Travel Mode


Press and hold '1', '3' and '5'



Save battery life by disabling the proximity sensor, keypad, and Bluetooth features. To toggle travel mode ON/OFF press and hold keys '1', '3', and '5' together until safe beeps.

View Battery Status

Press and hold '5'




To check the battery level press and hold the '5' key on the keypad (3 seconds). Keys from '1' to '4' will glow GREEN or RED to indicate the battery level. See pages 03 to 05 for more information.

More Hot Keys on the next page.

TUTORIALS ONLINE AT VAULTEKSAFE.COM/10SERIES-SUPPORT

Toggle Interior Light

Press and hold '1'



To toggle the interior light ON/OFF press and hold the '1' key for 3 seconds. With the light toggled to ON you can press the "LIGHT" button inside the safe to illuminate the light. If the light is toggled OFF the light will be disabled.

Toggle Bluetooth

Press and hold '2' and '5' then enter the master code



To toggle the Bluetooth ON/OFF press and hold keys '2' and '5' at the same time for 3 seconds. When keys '3' and '4' glow RED the Bluetooth is OFF. To enable Bluetooth, press keys '2' and '5' until all keys (1-5) light up RED, then input your master code. With the Bluetooth toggled ON you can perform various functions with the app. If the Bluetooth is toggled OFF all app functions will be disabled and your safe is undiscoverable.

Toggle App Unlock

Press and hold '1' and '4' then "PROGRAM" button



By default, the unlock feature on the Vaultek® app will be disabled. To toggle this feature press and hold keys '1' and '4' and "PROGRAM" button together for 3 seconds. If the status bar LED turns GREEN the unlock feature is enabled. If the status bar LED turns RED the unlock feature is disabled.

TUTORIALS ONLINE AT [VAULTEKSAFE.COM/10SERIES-SUPPORT](https://www.vaulteksafe.com/10series-support)

Vaultek® App Features

The Vaultek® app lets you get the most out of your safe. Using the app gives you access and control over features that are not possible using the keypad interface alone. To get started, download and install the Vaultek® app for free from the Google Play store or Apple store.

App Features

Unlock Safe Within Range (Optional) | Check Battery Levels

Toggle Sound On/Off | Adjust Interior Light

View History Log

Helpful TIPS

History Log Timestamp Any actions recorded in the history log before your phone is paired with the safe will show a timestamp from the safe's default clock - this may not match your phone's time or date. To sync your phone's time with the safe's history log, simply remove the battery and reinstall and immediately re-sync your phone before performing any other actions.

Remote Unlock By default, the unlock feature on your app will be disabled. If you wish to enable this feature, press and hold keys '1' and '4' followed by the PROGRAM button together for 3 seconds. Repeat the sequence to disable the unlock feature.

Privacy Notice

Vaultek Safe, Inc. does not access your personal information. The app may require some permissions to store personal preferences such as your safe settings and Bluetooth settings to communicate with your safe. In no way do we gain or collect any personal information from you.

TUTORIALS ONLINE AT [VAULTEKSAFE.COM/10SERIES-SUPPORT](https://www.vaulteksafe.com/10series-support)

Vaultek® App Pairing

- 1 **Get the App** Download the Vaultek® app from the Google Play store or Apple store.
- 2 Make sure your phone's Bluetooth settings are set to ON, and **open the Vaultek® app to begin.**

IMPORTANT You must be within Bluetooth range to pair your phone with your safe. The approximate range is 25 feet.

- 3 **Create a Pattern Lock** This is an added layer of protection to safeguard your safe and prevent unauthorized access in the event your phone is misplaced. To create your pattern lock, simply drag your finger along the screen to connect at least four dots.
- 4 **Select Your Safe** After a few seconds your safe will appear in the search. You can drag the screen downwards to refresh if you are not seeing your safe listed. Select your safe, and enter your safe's master code when prompted. This is the same code used to open the safe using the numeric keypad.

IMPORTANT If you change your safe's master code after pairing, the safe will no longer connect to your app, and you will be prompted to enter the new code when needed.

IMPORTANT As a security measure, if too many incorrect master code entries are entered, your safe's Bluetooth will disable and must be toggled ON again using the hot key sequence. Refer to page 09.

- 5 **Sync Your Phone - A.** Press and hold keys '4' and '5' on your safe followed by the "PROGRAM" button together for 3 seconds to start the syncing protocol. **B.** When the keypad starts blinking RED you can finalize the pairing sequence from your app screen by pressing 'OK'. The safe's keypad will flash GREEN and beep when complete, if the keypad flashes RED with two beeps you will need start over with step 4.

TIP This pairing sequence offers enhanced security protection and can only be used to pair one phone to your safe. If the process is repeated with a different phone, the previous phone will be overridden and disconnected from the safe.

Remote Unlock Refer to page 10 on how to enable this feature.

Securing Your Safe

Your Vaultek® safe can be secured a few different ways. Included is a security cable to attach your safe to larger stationary objects. There are also mounting screws included to mount the safe to a flat surface using the pre-drilled holes on the bottom.

Using the Security Cable

- 1 Loop the security cable around a secured object.
- 2 Run the end of the cable through the eye of the other end and pull tight around the object.
- 3 Place the end of the security cable inside the fully enclosed quick release cable mount inside your Vaultek® safe as shown in (FIGURE H).
- 4 Make sure the safe closes with the cable secured inside the quick release cable mount.

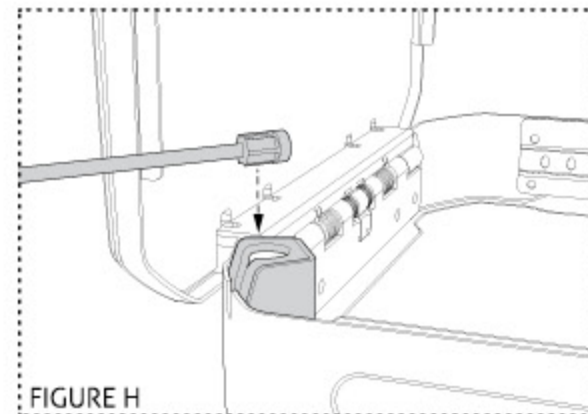


FIGURE H

Using the Mounting Screws

TIP: Make sure you have enough clearance for the lid to open properly before mounting the safe.

- 1 Position the safe on a flat surface where you want to mount it.
- 2 Use a pencil to mark the holes for drilling.
- 3 Drill pilot holes.
- 4 Position safe in place and install screws through safe into pilot holes. Tighten screws.

IMPORTANT

Mounting the safe vertically so that the door flips upward will result in incomplete opening of the safe due to weight. The door will open if the safe is mounted so that the door opens down or to the side.

Q: Why is the unlock feature on the app grayed out?

A: By default, the unlock feature on your app will be disabled. If you wish to enable this feature, press and hold keys '1' and '4' followed by the PROGRAM button together for 3 seconds. Repeat the sequence to disable the unlock feature.

Q: Why does the app history log clock not match up with my phone's clock?

A: The safe's internal clock will sync with your phone automatically when paired. All previous history, before the sync, will appear from the safe's default clock and may not match your phone's clock. Refer to page 10.

Q: Can I keep the safe plugged in at all times?

A: Leaving your safe plugged in continually will **not** harm the safe or battery. However, to preserve the battery life span for portability we suggest that you unplug occasionally to allow the battery to cycle down.

Q: What happens if the battery dies?

A: The safe retains the master code in the event of battery failure. Once power is restored by inserting the charging kit, the unit will function as it did before the power loss.

Q: What type of battery does my Vaultek® safe use?

A: Use a 3.7V 18650 rechargeable lithium-ion battery with a flat top. A minimum 2000 mAh capacity is required, however 2200mAh or higher can be used to increase operation time. A battery upgrade is available through our website at www.vaulteksafe.com.

Q: Can I use a battery of more than 2000mAh?

A: Yes, a minimum 2000mAh capacity is required, however 2200 mAh or higher can be used to increase operation time. A battery upgrade is available through our website at www.vaulteksafe.com.

STOP! Do not return to retailer. If you have any questions about your Vaultek® safe or need help configuring the system, please contact us at support@vaulteksafe.com.

TUTORIALS ONLINE AT VAULTEKSAFE.COM/10SERIES-SUPPORT

Q: Is my Vaultek® safe fireproof or waterproof?

A: No, the safe is not fireproof nor waterproof. This safe has been specifically designed for portability, secure access, and convenience.

Q: What do I do when my safe's keypad is unresponsive?

A: Your battery is likely dead. Connect to power and your safe should recharge the battery and function normally. If your battery has failed, you may need to use the backup key provided with the unit to open the safe and replace the battery.

Q: What happens if I lose the keys?

A: First, make sure you registered your safe in the event you do lose your keys. Visit support at vaulteksafe.com for assistance in replacing a set of keys. Be prepared to provide your order details and product number.

Q: What other models are available?

A: Refer to our website to see all the available models. Also, feel free to sign up for our newsletter to receive the latest news on all things Vaultek®.

Q: Can I travel with my Vaultek® safe through US Customs or TSA Security at the airport?

A: Yes, there are no restrictions on carrying this type of item. Please be aware that you may be asked to open your safe. Rather than passing it through x-ray we recommend that an authorized user be present during the transport of this item in case such a request is made by a government authority. If transporting a firearm, be sure the safe is checked or included with checked luggage and that you notify your airline agent at check in.

Don't see your questions answered.
Send us your question to support@vaulteksafe.com.

TUTORIALS ONLINE AT VAULTEKSAFE.COM/10SERIES-SUPPORT

If you experience any issues with your safe, try the following solutions.

The app history log clock does not match up with my phone's clock.

A: To sync your phone's time with the safe's history log, simply remove the battery and reinstall and immediately re-pair your phone before performing any other actions. Refer to page 10.

The app is asking for a code for pairing.

A: That is the master code used to open the safe via the numeric keypad. Refer to page 11.

The unlock feature on the app is grayed out.

A: By default, the unlock feature on your app will be disabled. If you wish to enable refer to page 10.

Lid is not engaging.

A: The lid requires a firm press. You will feel the latches engage if you press slowly. Feel/listen for the click.

The keypad is not responding.

A: Remove the battery and reinstall. This is a soft reset for the safe. See if you are able to open the safe using the keypad or reprogram the safe's master code. If you are still experiencing issues please visit support at vaulteksafe.com for assistance.

Unable to change master code.

A: Refer to page 06 of the user manual or check tutorials online at vaulteksafe.com under Support/Tutorials.

Sound is not working.

A: To toggle the sound ON/OFF press and hold keys '1' and '3' together for 3 seconds. If the '2' key glows GREEN, the sound is ON; if the '2' key glows RED, the sound is OFF. If the sound is toggled on and you still can't hear it, have someone else in your house listen as the sound is high pitched.

Soft Reset: Remove the battery and reinstall. The master code will not be affected. Refer to page 05 for more details.

STOP! Do not return to retailer. If you have any questions about your Vaultek® safe or need help configuring the system, please contact us at support@vaulteksafe.com.

Customer Support

If you have a problem with your Vaultek® safe that is not answered in the FAQ section of this manual, we encourage you to visit www.vaulteksafe.com/10series-support.

Limited Warranty (Terms and Conditions)

Vaultek® is committed to building high quality products and will make every effort to ensure our products are free from any defects. We guarantee your safe will be free of defects in materials or workmanship for a period of three years from the date of original purchase from an authorized dealer. This warranty does not cover abuse, misuse, use in any manner for which is not designed, neglect, modification, damage inadvertently caused by the owner, accidents, and/or tampering.

If you encounter a problem with your Vaultek® safe, contact our support team online at vaulteksafe.com/support for assistance. If your safe is determined to be defective and we are responsible for the cause we will have it repaired at our expense, or we will send a new replacement at no cost to you. You will be required to return your existing unit as well as all included accessories to Vaultek® prior to replacement of the defective unit along with your verification of purchase.

If it is determined your safe needs to be returned our customer support team will provide you with a Return Merchandise Authorization (RMA) number. Please have the following information available when contacting us:

- Purchaser's name and mailing address, email address, and phone number.
- Copy of receipt or online order number (if purchased directly from us or Amazon)
- Authorized dealer name (if applicable)
- Detailed description of problem

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR ANY INJURY, LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VAULTEK® SAFE.

FCC

This device has been evaluated to meet general RF exposure requirement, and this device can be used in portable exposure condition without restriction.

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE

Due to the used enclosure material, the product shall only be connected to a USB

Do not use the product in the environment at too high or too low temperature, never expose the product under strong sunshine or too wet environment. The suitable temperature for the product and accessories is 0°C-40°C.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

The adapter shall be installed near the equipment and shall be easily accessible.

EU Regulatory Conformance

Hereby, Vaultek Safe, Inc. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For the declaration of conformity, visit the Web site <https://vaulteksafe.com>.





VAULTEK®

37 North Orange Ave. Suite 800B Orlando, FL 32801

VAULTEKSAFE.COM